



## Installation Instructions

REV 3 04/15/20

Part No. **3230**

Product: Running Boards

Application:

**Nissan Murano 2015+**


Level of Difficulty: 1 **2** 3 4 5

Installation Time: 60 min.

Hardware	Torque Specifications
M6 Bolt	3 ft-lbs.
M8 Bolt	7 ft-lbs.
M10 Bolt	16 ft-lbs.
M12 Bolt	28 ft-lbs.

**ATTENTION:** Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty.


If you have any questions please contact our technical team at 1-866-717-6645

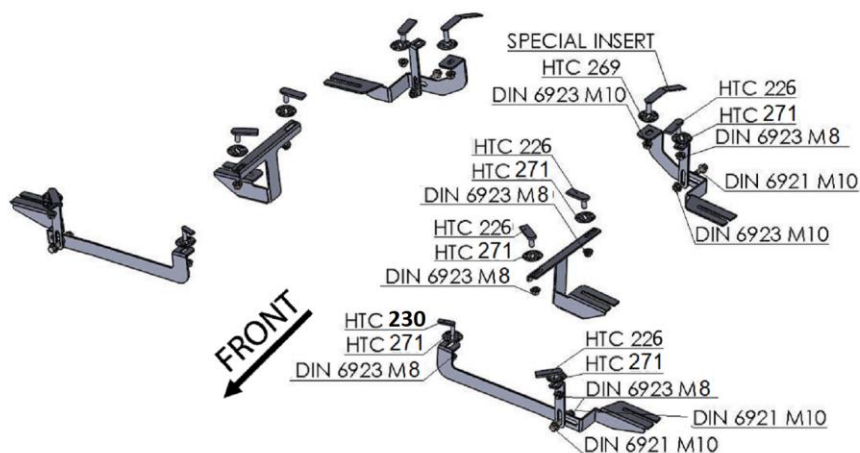

### HARDWARE

8		HTC 226 M8X30 (4x10x37)	4		HTC 269 KLIPS (M10)	8		FLANGE NUT M10 DIN 6923
4		FLANGE DIN 6921 M10x30	8		HTC 271 KLIPS (M8)	8		FLANGE NUT M8 DIN 6923
2		HTC 230 M10	2		M10 SPECIAL INSERT (2x10x100)			

### BRACKETS

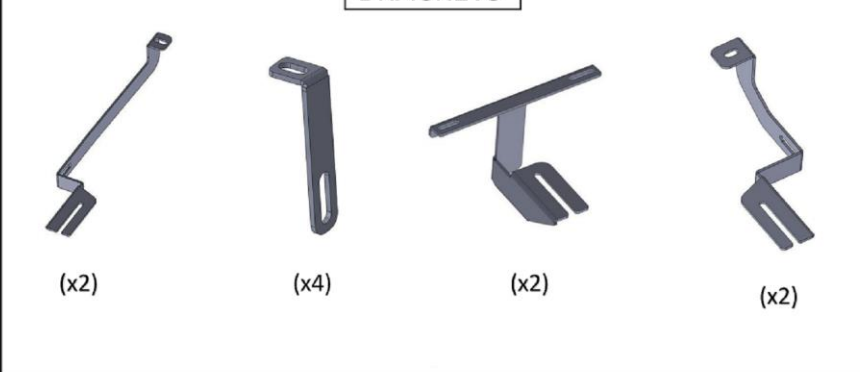

# Installation Instructions 3230 Bracket Kit

Video  
Installation  
Instruction:

**NOTE:** Will not fit models with factory “puddle” lights

**Step 1:** Locate front mounting locations and hardware as per 1<sup>st</sup> page of this installation manual

**Step 2:** Install provided HTC 230 as shown Figure 1.




**Step 3** Remove factory rubber plug as shown Figure 2. Install provided HTC 226 and attach extra support bracket Figure 3. Do not tighten



**Step 4:** install front bracket as shown Figure 4. Do not tighten

**Step 5:** Attach main bracket to extra support using supplied M10 hardware Figure 5. Do not tighten

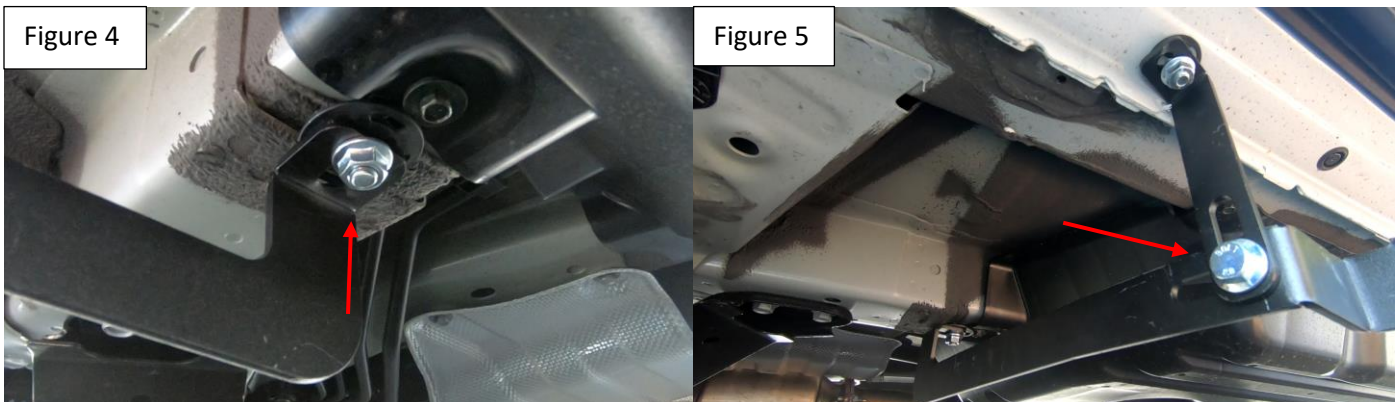

# Installation Instructions 3230 Bracket Kit


**Step 5:** Locate middle bracket support area and remove rubber plugs Figure 6. Install middle bracket as shown Figure 7. Do not tighten



**Step 6:** Locate rear bracket mounting area, Take the special insert and install as shown figure 8.

**Step 7:** Remove factory rubber plug and install provided HTC 226. Attach extra support as shown Figure 9. Do not tighten.

**Step 8:** Install rear main bracket as shown Figure 10. Do not tighten. Attach to extra support using provided M10 hardware Figure 11. Do not tighten.

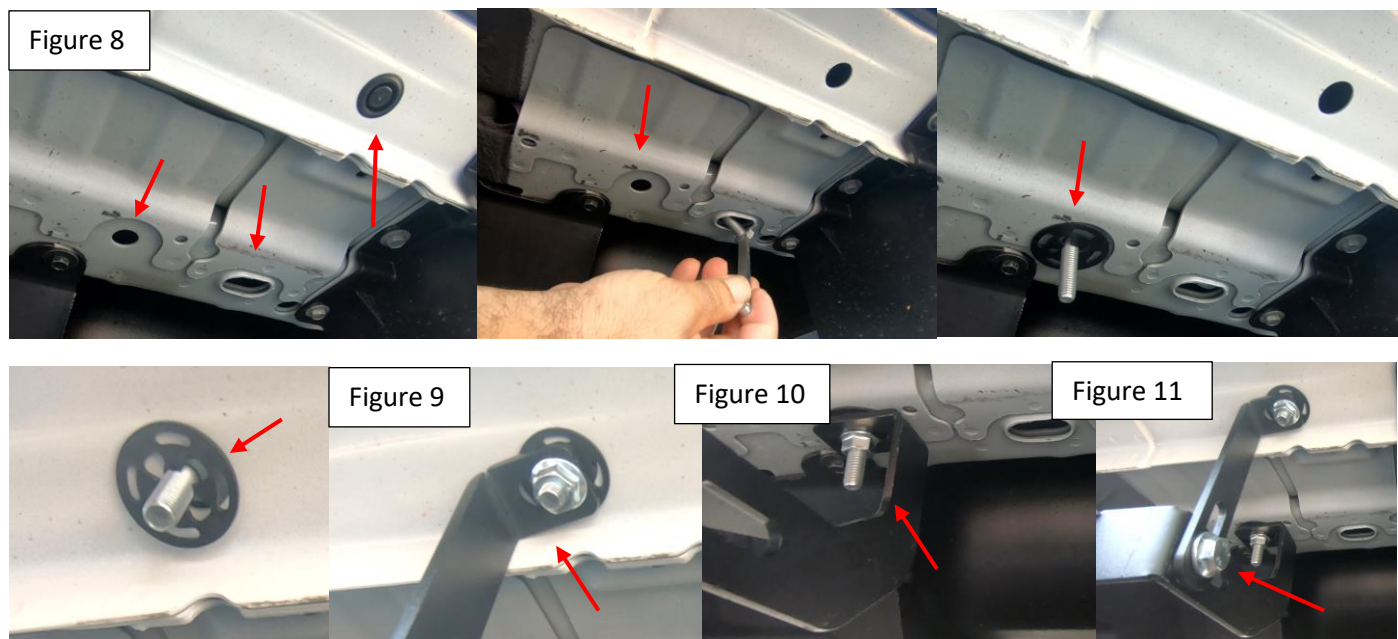


**Step 4:** Proceed to last page of this manual for running board install instructions and torque values

For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation.

***Thank you for choosing Romik.***



# Running Board Installation Instructions

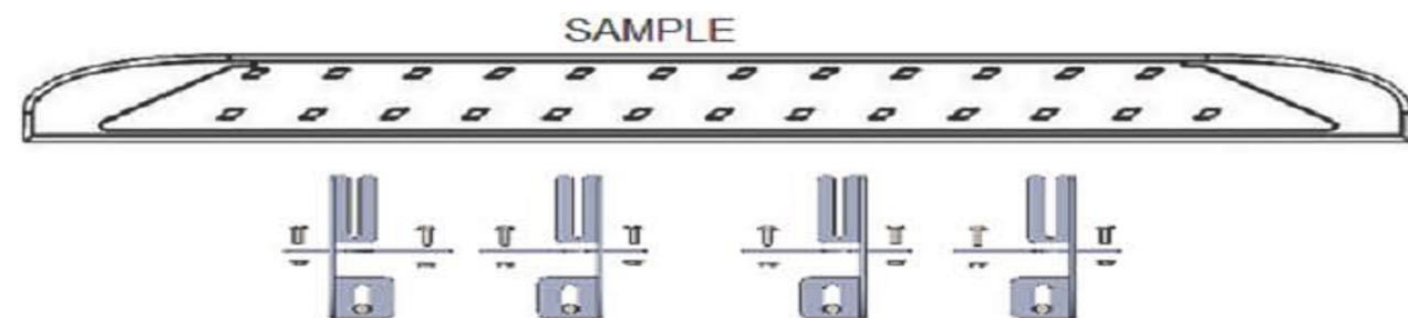

**RAL / RB2 / REC / RCV / RZR**



**ROB / ROF / RPD**

- 1) Flip your Romik running boards onto a flat surface, make sure to place the running boards on a towel or cardboard in order to protect the surface Figure 1.
- 2) Loosen the M8 bolts on back of your running boards Figure 2. Depending on your model there will be either 6 or 8 bolts installed per side.
- 3) Once your brackets have been installed, place the running board onto the brackets as shown on Figure 3.
- 4) Adjust running boards, centering on vehicle. Hand tight M8 hardware on running boards.
- 5) Follow the torque procedures, torque M8 hardware to **7 ft-lbs** using a torque wrench.
- 6) Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.
- 7) Register your products at [www.Romik.com/contact/productregistration](http://www.Romik.com/contact/productregistration)
- 8) Warranty information at [www.Romik.com/warranty](http://www.Romik.com/warranty)