



Installation Instructions

Part No. **1422**
 Product: Running Boards
 Application: **Chev Silverado / GMC Sierra 1999-2018**
 Level of Difficulty: 1 2 3 4 5
Professional Installation Time: 90 Min.
DIY Installation Time: 180 Min


REV 4 04/01/25

Hardware	Torque Aluminum	Torque Steel to Steel
M6 Bolt	3 ft-lbs.	14 ft-lbs.
M8 Bolt	7 ft-lbs.	35 ft-lbs.
M10 Bolt	16 ft-lbs.	64 ft-lbs.
M12 Bolt	28 ft-lbs.	112 ft-lbs.

ATTENTION: Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty. If you have any questions, please contact our technical team at 1-866-717-6645

Attention: Please make sure that you have the latest instructions from **Romik.com**

QR Scan

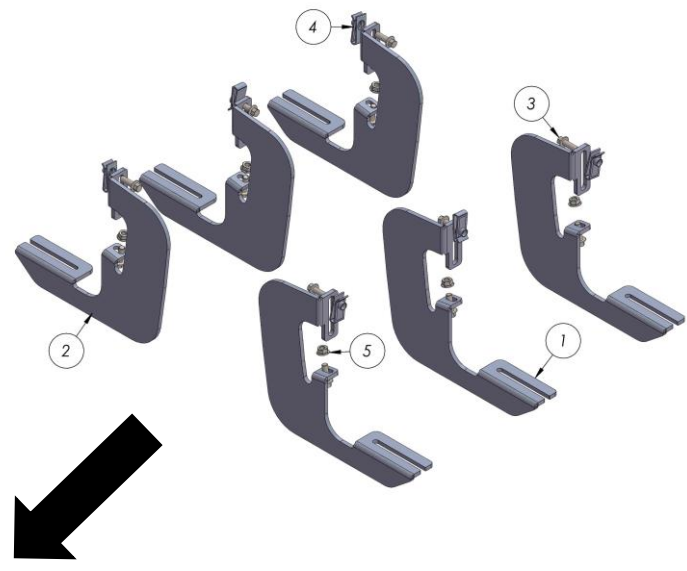

ITEM	PART NAME	QTY
1	1421850F0C0B0 DRIVER	3
2	1421850F0C0B0 PASSENGER	3
3	DIN 6921 FLANGE BOLT M8 x 25	12
4	M8 U-NUT	6
5	DIN 6923 FLANGE NUT M8	6




EXT Cab 6 Brackets
 Single Cab 4 Brackets

Installation Instructions 1422

Step 1: Locate front mounting locations and hardware as per 1st page of this installation manual

Step 2: Remove factory rubber plugs as shown on Figure 1. These vehicles have 4 positions, we are only using 3 positions #1, #2 and #4


Step 3: Installed supplied M8 U-Nut as shown on Figure 2 positions #1, #2, #4

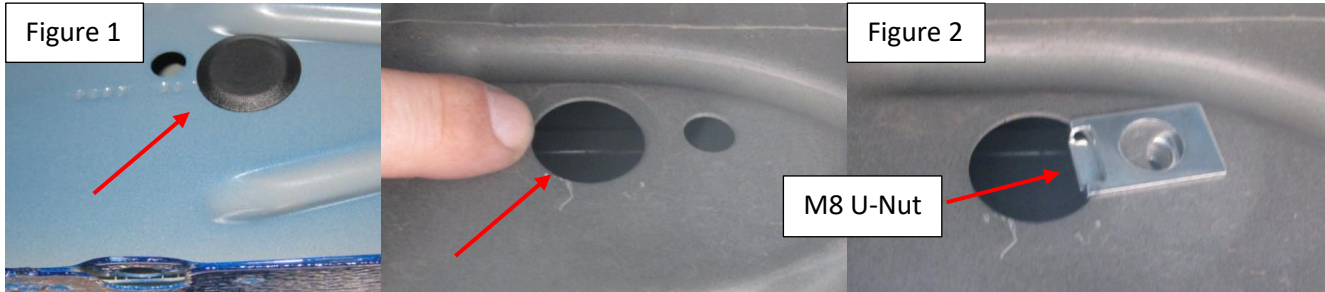

Step 4: Installed supplied M8 U-Nut as shown on Figure 3 #1, #2, #4



Step 5: Install brackets using supplied M8 hardware Figure 4. Bracket positions #1, #2, #4

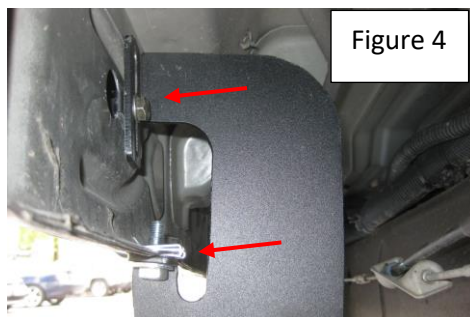

Step 6: Proceed to last page of this manual for running board install instructions and torque values
For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation.

Thank you for choosing Romik

Installation Instructions Running Boards

NOTE: Use of power tools will damage the bottom of the running board and void your warranty.

RAL/RB2/REC/RZR Running boards

Step 1: loosen the M8 hardware on back of the running boards.

Step 2: Slide running board onto brackets

Step 3: Tighten hardware to 7 ft lbs.




ROF/RPD/ROB Running boards

Step 1: Place clamping plate on top of running board as shown below. Make sure clamping plate sits correctly on running board surface.

Step 2: Install carriage bolts and plastic retaining clips as shown below.

Step 3: Install and tighten hardware to 7 ft lbs.

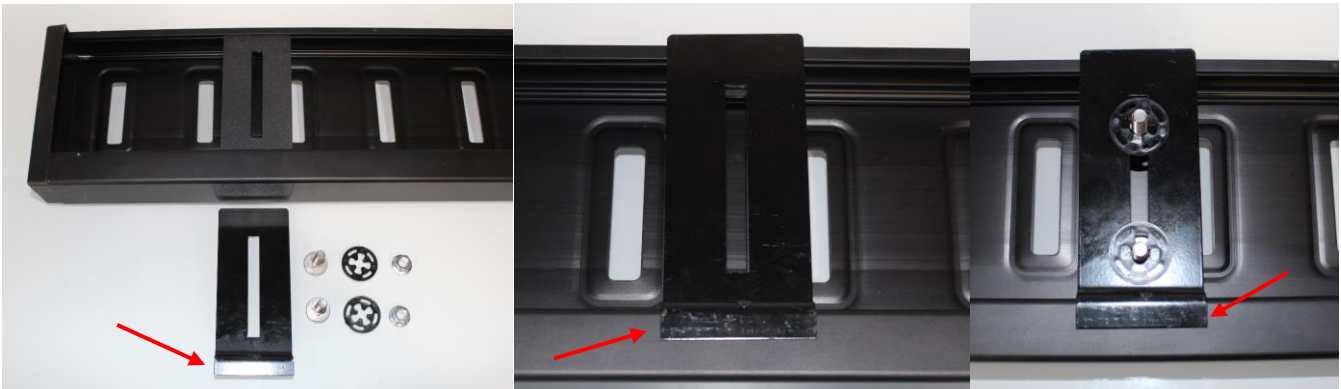


RPT-R Running boards

Step 1: Place the RPT-R running board on top of the mounting brackets. If you are using the optional DRP covers, make sure they are installed first.

Step 2: Slide the RPT-R clamp plates from inside the running board to its location. Wide section out green arrow / Narrow section towards the vehicle red arrow

Step 3: Repeat procedure on all mounting brackets

Step 4: Install and tighten hardware to 7 ft lbs.

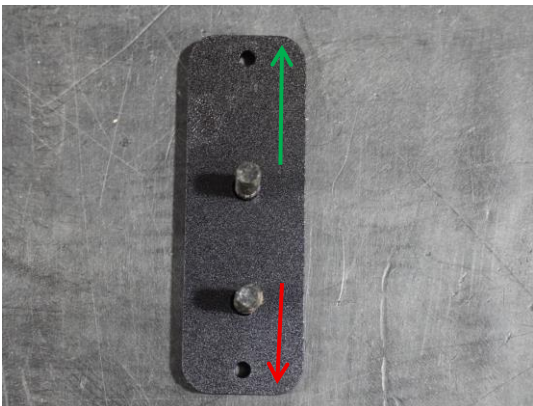

Product Registration and Warranty Information



- Register your Romik products at <https://romik.com/productregistration>
- Warranty information at <http://www.romik.com/warranty>

Cleaning and maintaining your Romik Running boards

Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.

For video instructions on how to clean your Romik products please click here <https://romik.com/cleaning>