

ROMIK

Installation Instructions

Part No. 2337

Product: Running Boards

Application: **Hyundai Palisade 2026 - Present**

Kia Telluride 2027 – Present

Level of Difficulty: 1 2 **3** 4 5

Professional Installation Time: 90 Min.

DIY Installation Time: 180 Min

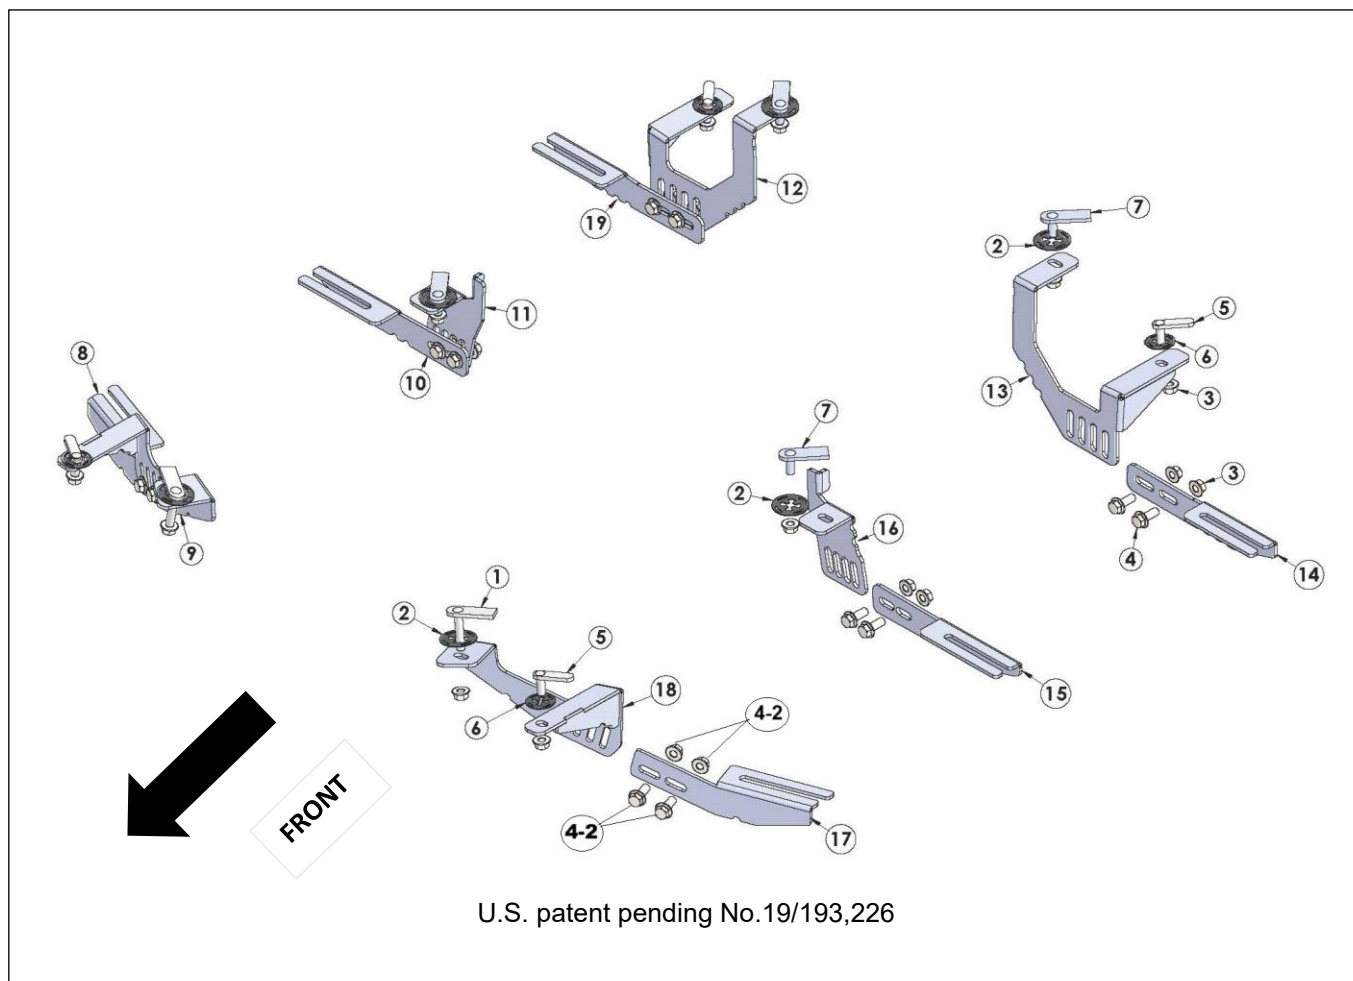
REV 2 07/15/26

Hardware	Torque Aluminum	Torque Steel to Steel
M6 Bolt	3 ft-lbs.	14 ft-lbs.
M8 Bolt	7 ft-lbs.	35 ft-lbs.
M10 Bolt	16 ft-lbs.	64 ft-lbs.
M12 Bolt	28 ft-lbs.	112 ft-lbs.
















ATTENTION: Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty. If you have any questions, please contact our technical team at 1-866-717-6645

Attention: Please make sure that you have the latest instructions
from *Romik.com*

QR Scan




U.S. patent pending No.19/193,226

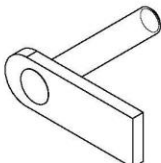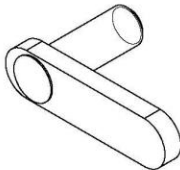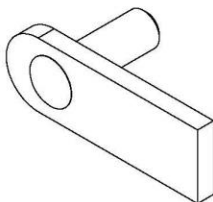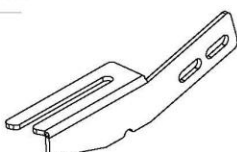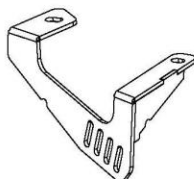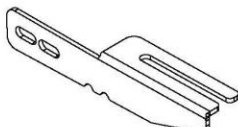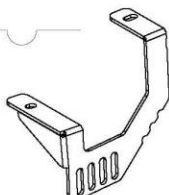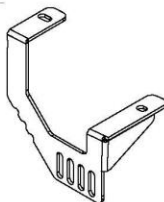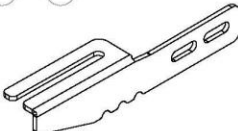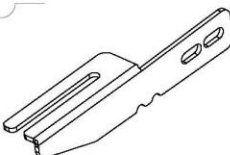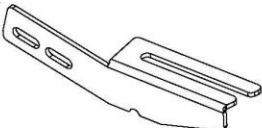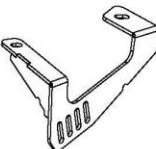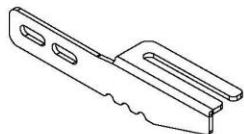ITEM NO: 1  HTC 318 - M10x50(5x20x60) (X2)	ITEM NO: 2  HTC 269 - CLIPS (M10) (X6)	ITEM NO: 3  Hexa Flange Nut DIN 6923 - M10 (X18)	ITEM NO: 4  DIN 6921 - M10 x 25 (X8)
ITEM NO: 5  HTC 243 - M10x25(4x12x50) (X4)	ITEM NO: 6  HTC 271 - CLIPS (M8) (X4)	ITEM NO: 7  HTC 230 M10x25(5x20x60) (X4)	ITEM NO: 4 - 2 Front Bracket  M8-30 Bolt (X4)  M8 Flange Nut (4x) M8 Flat Washer  (X8)
ITEM NO: 8  2337 Passenger Front (X1)	ITEM NO: 9  2337 Passenger Front (X1)	ITEM NO: 10  2337 Passenger Middle (X1)	INSTALL TIP Make sure bracket markings match. Each corresponding bracket has markings below.  BRACKET MARKINGS
ITEM NO: 11  2337 Passenger Middle (X1)	ITEM NO: 12  2337 Passenger Rear (X1)	ITEM NO: 13  2337 Driver Rear (X1)	
ITEM NO: 14  2337 Driver Rear (X1)	ITEM NO: 15  2337 Driver Middle (X1)	ITEM NO: 16  2337 Driver Middle (X1)	
ITEM NO: 17  2337 Driver Front (X1)	ITEM NO: 18  2337 Driver Front (X1)	ITEM NO: 19  2337 Passenger Rear (X1)	

Installation Instructions 2337 Bracket Kit

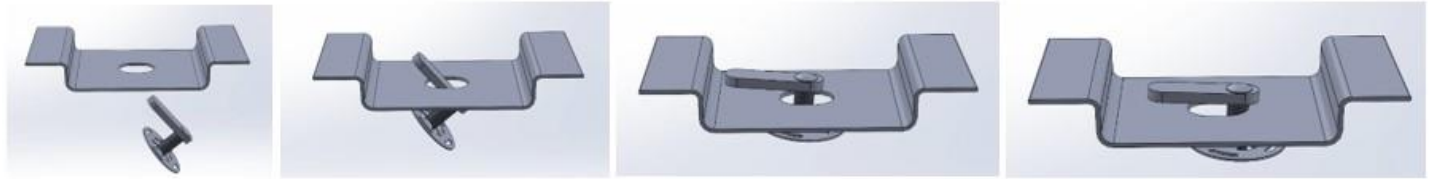Important Install Tip: When installing Romik HTC inserts follow the sequence below. Make sure the HTC is seated correctly and do not use power tools as this will only spin the insert and possibly damage it. Test by tugging on it before installing bracket. Blue loctite is highly recommended on all metal parts.




NOTE: This vehicle requires undercarriage panel trimming

You do not have to remove the panel if you follow the instructions. Please measure correctly and trim in small sections to avoid large gaps. This installation is performed on the driver's side; passenger side is identical.

Panels were removed for illustration purposes.


Step 1 Front bracket: Locate the hardware holding the panel in place (red circle) Figure 1. Mark a 3 x 3 square Figure 2 on the visible indent use a utility knife and trim panel. If you don't feel comfortable doing this, remove the two bolts by holding the panel and use scissors to cut the area that is needed to be exposed.

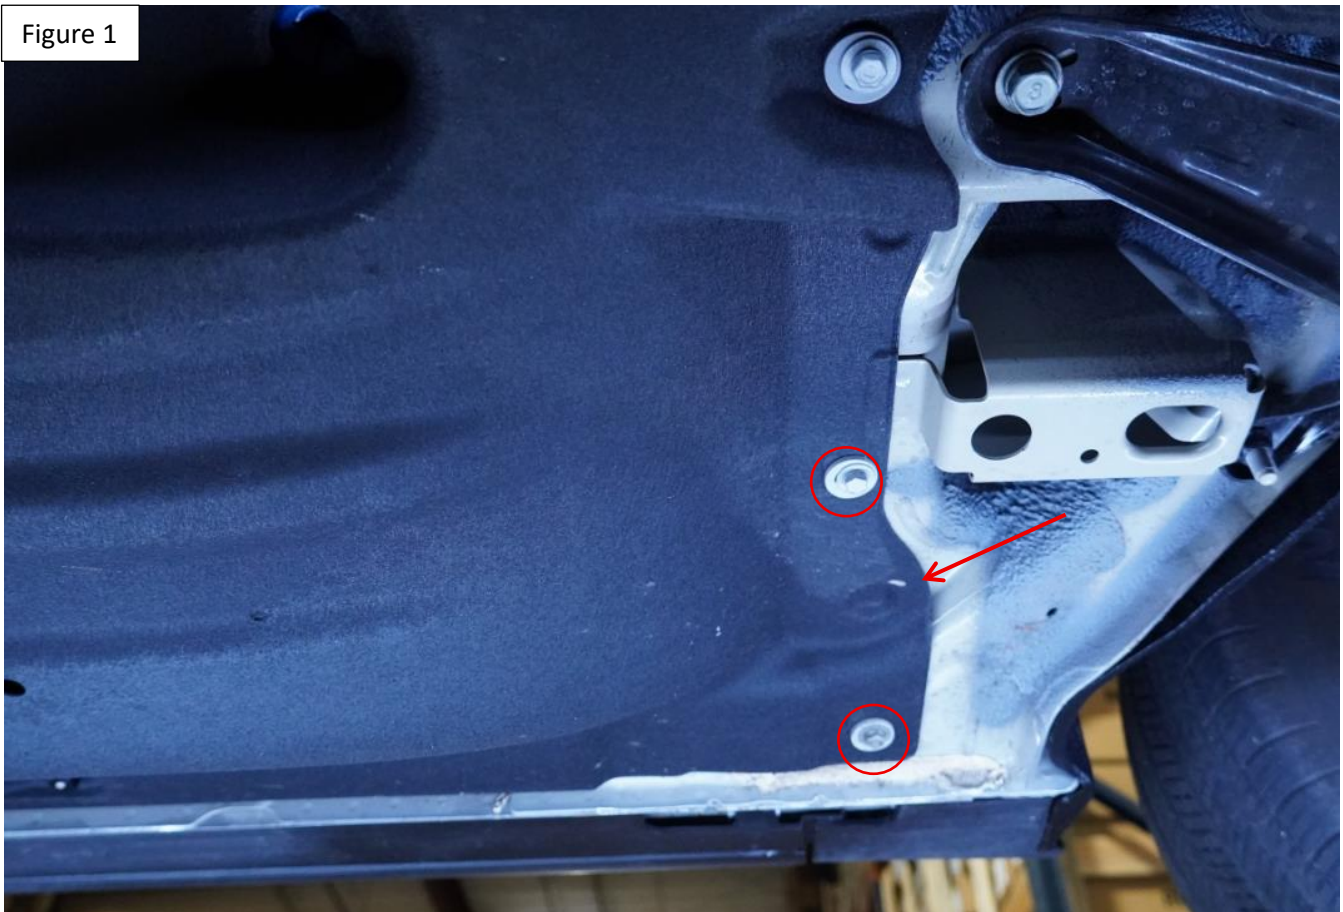Figure 1




Installation Instructions 2337 Bracket Kit

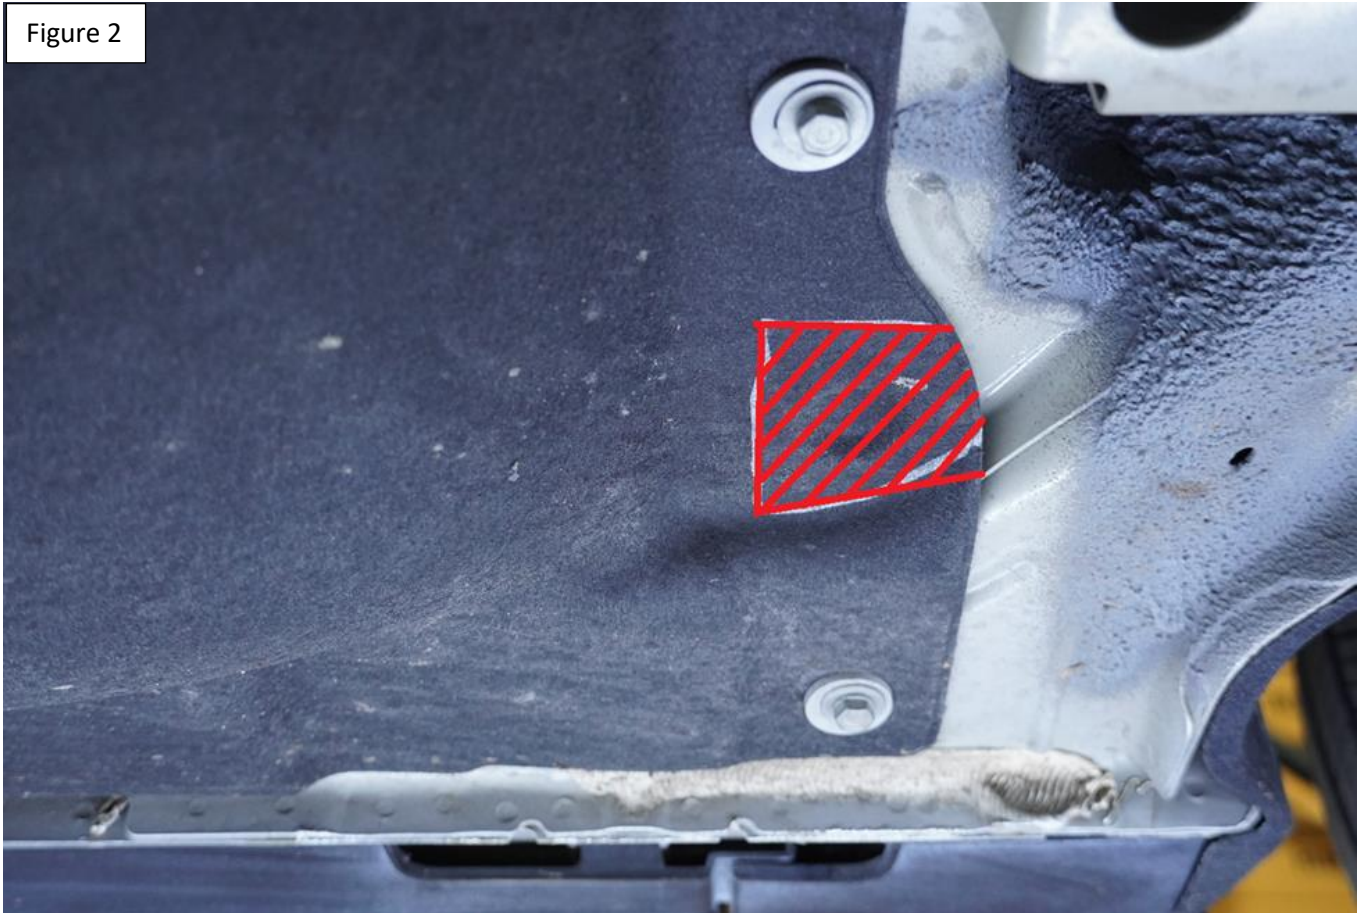Figure 2



Step 2: Insert provided HTC 318 #1 with HTC 269 clips #2 Figure 3. **NOTE** cover was removed for illustration purposes.

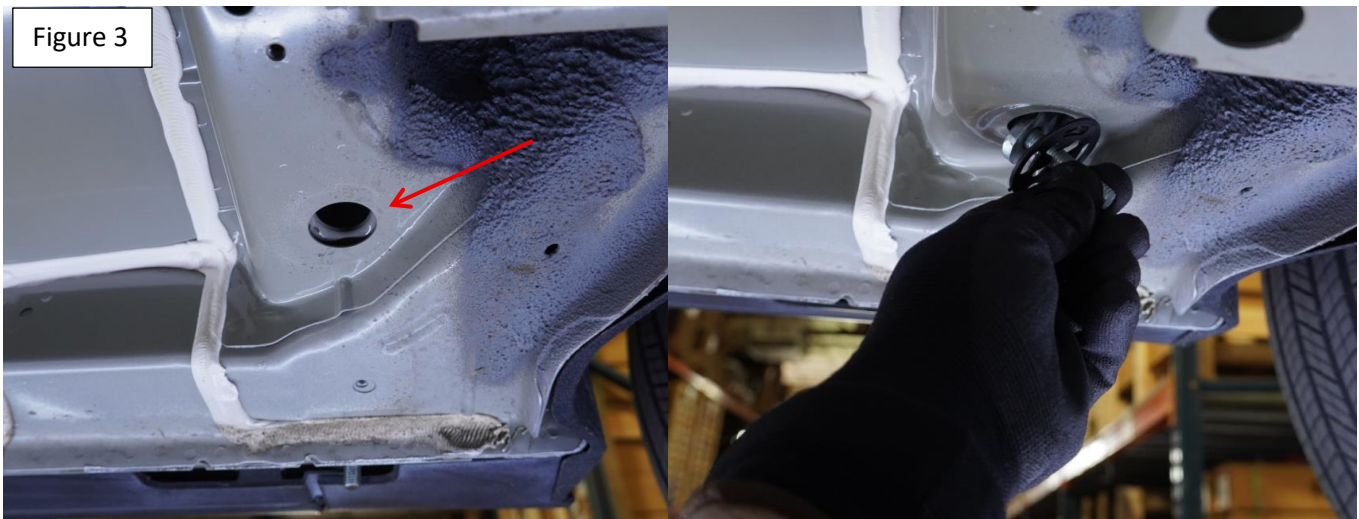Figure 3




Installation Instructions 2337 Bracket Kit

Step 3: Locate the outer mounting point as shown on figure 4. Remove the rubber plug and install provided HTC 243 #5 and HTC 269 clips #2 Figure 5.

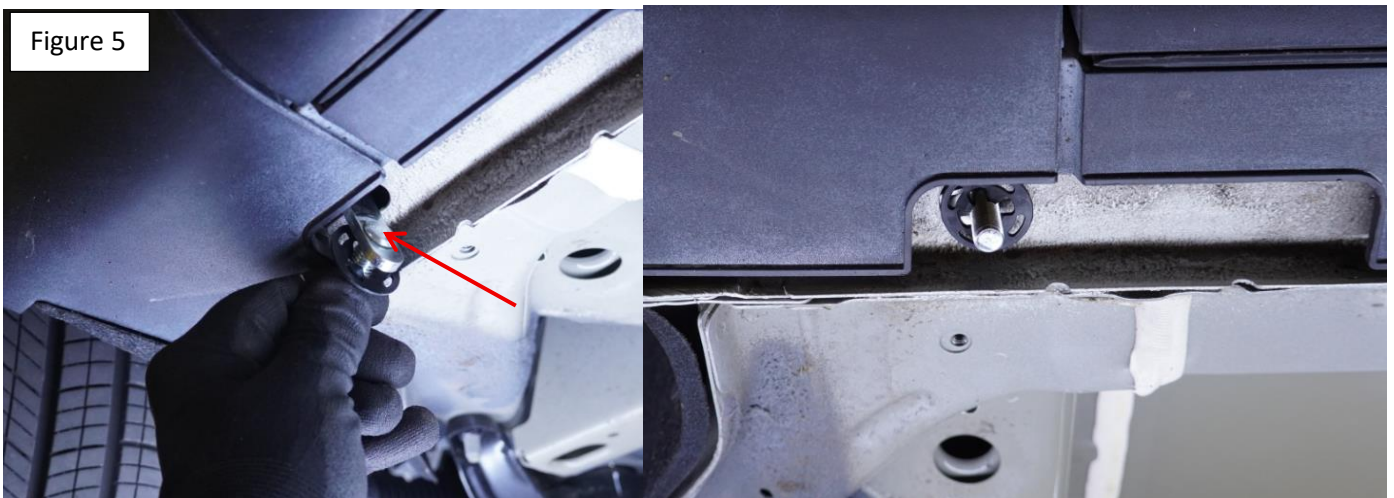Figure 4

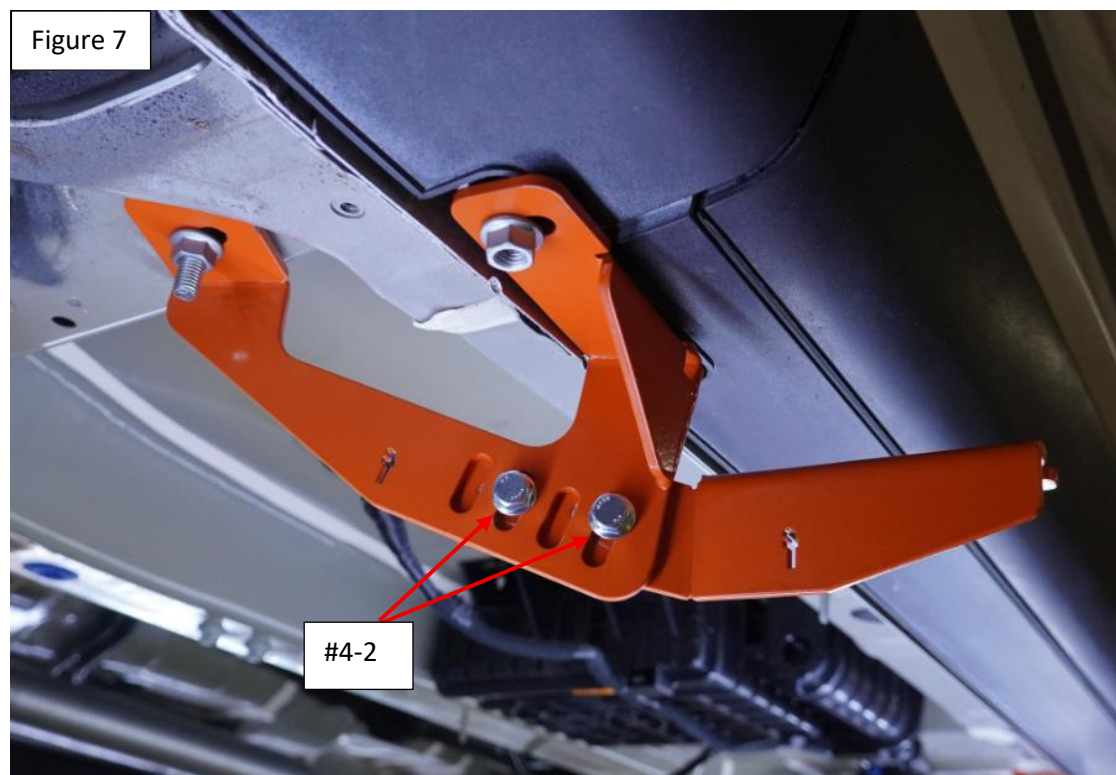


Figure 5



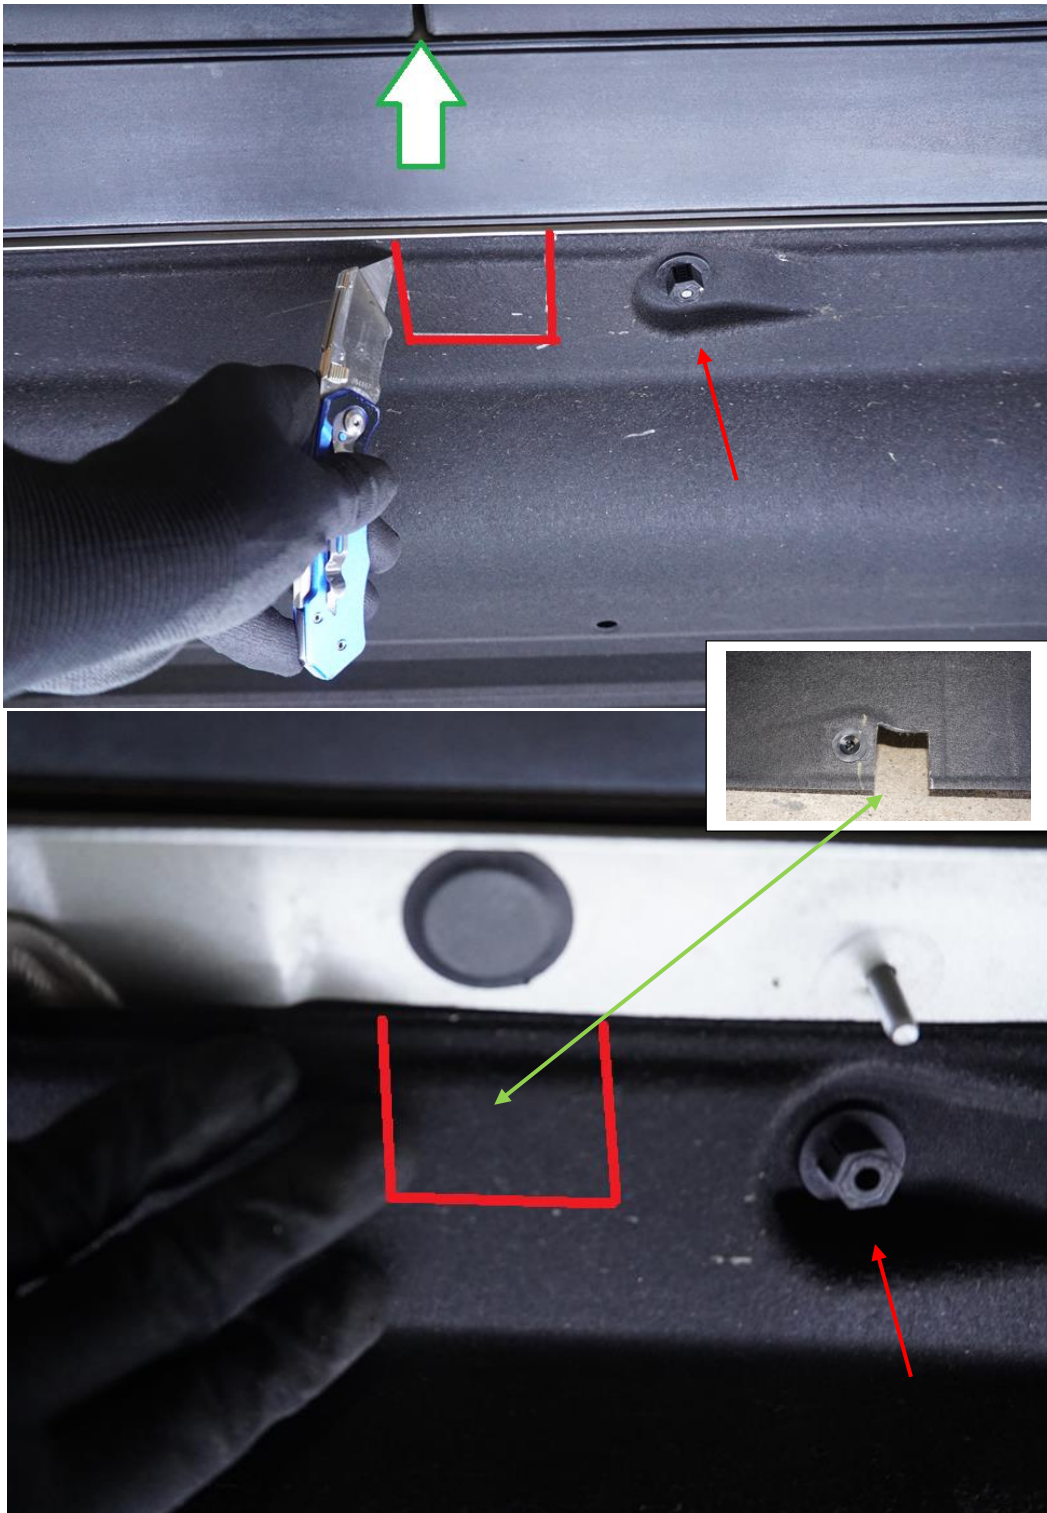
Installation Instructions 2337 Bracket Kit

Step 4: Install front bracket #18 as shown on Figure 6. Do not tighten. Attach bracket #17 using supplied M-8 hardware #4-2 with washers. Figure 7. **Hand tight only.**



Installation Instructions 2337 Bracket Kit


Step 5 Middle bracket: NOTE green arrow is pointing to the door gap. This is where the two doors meet. Locate the plastic retaining clip Figure 8. This is the area you will be trimming. Undo the plastic clip and peel back the cover to expose the rubber plug. Cut a 3 x 4-inch section to start and proceed with the installation.



Installation Instructions 2337 Bracket Kit

Step 6: Remove factory rubber plug and install the HTC 230 #7 with HTC 269 #2 as shown Figure 8

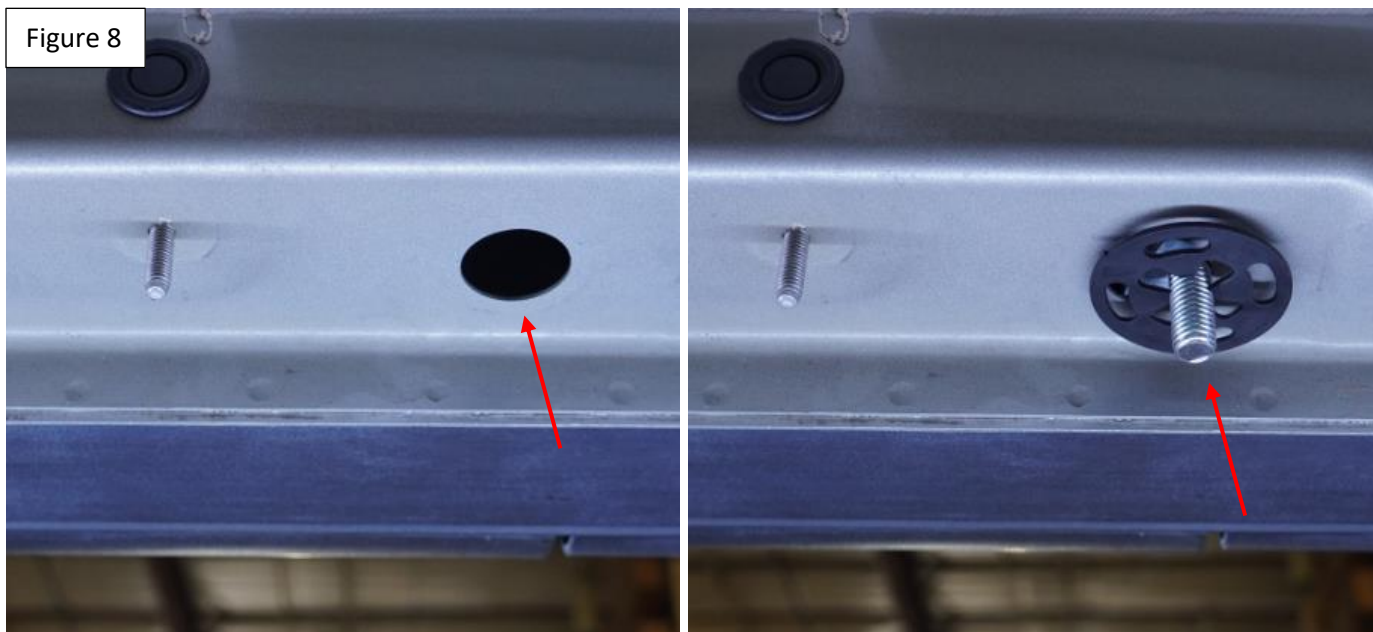Figure 8




Step 7: Install bracket #16 and attach bracket #15 using supplied M-10 hardware #3 and #4 Figure 9. **Hand tight only.**

Figure 9



Installation Instructions 2337 Bracket Kit

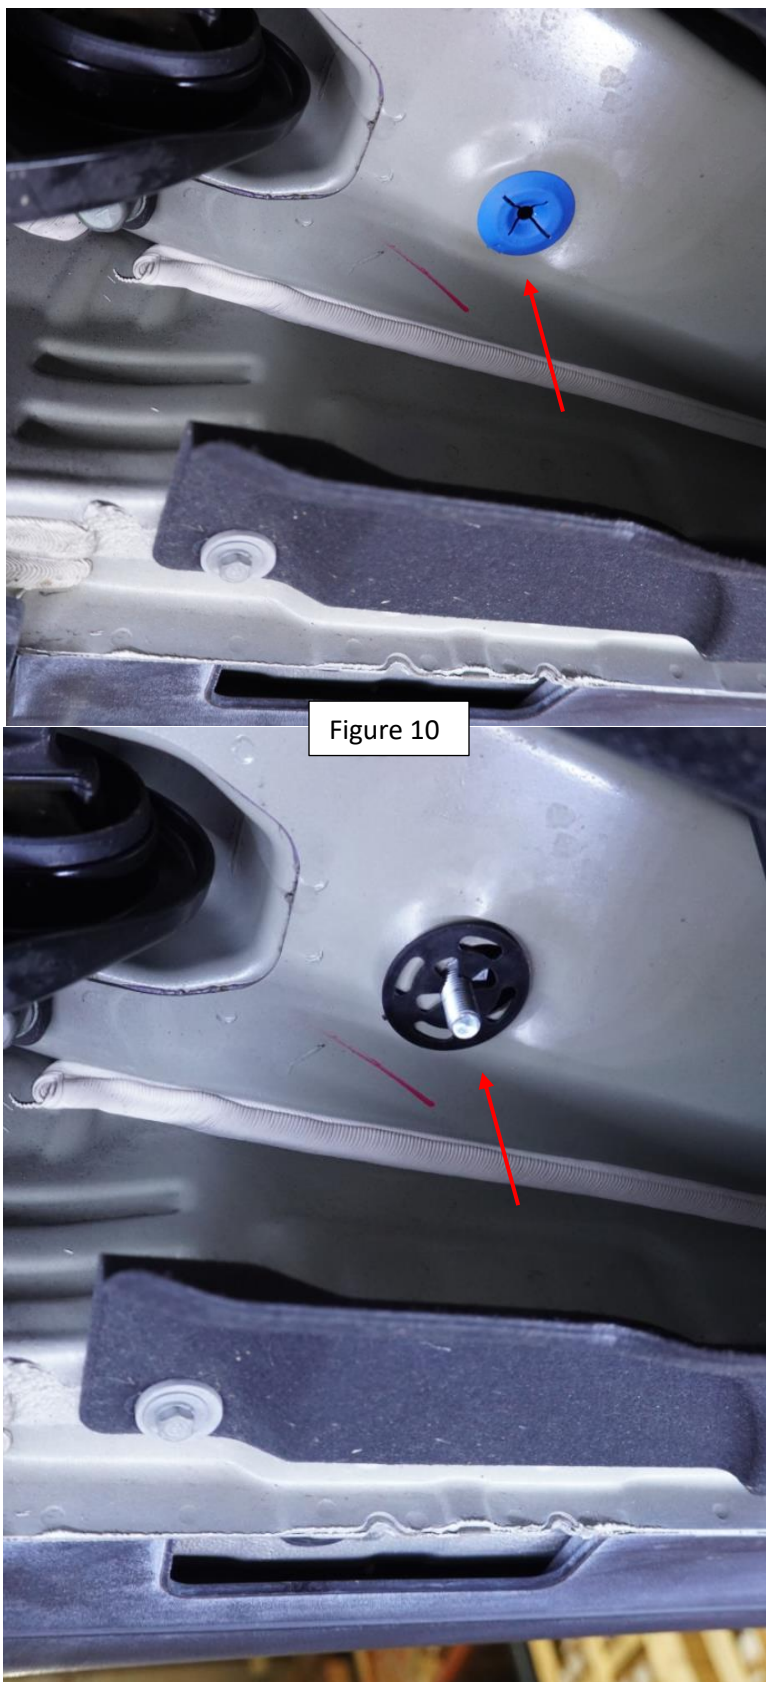
Step 8 Rear bracket: Locate rear mounting area, remove rubber plug and install HTC 230 #7 as shown Figure 10.



Installation Instructions 2337 Bracket Kit

Step 9: Locate the outer mounting point as shown on figure 11. Remove the rubber plug and install provided HTC 243 #5 and HTC 269 clips #2.

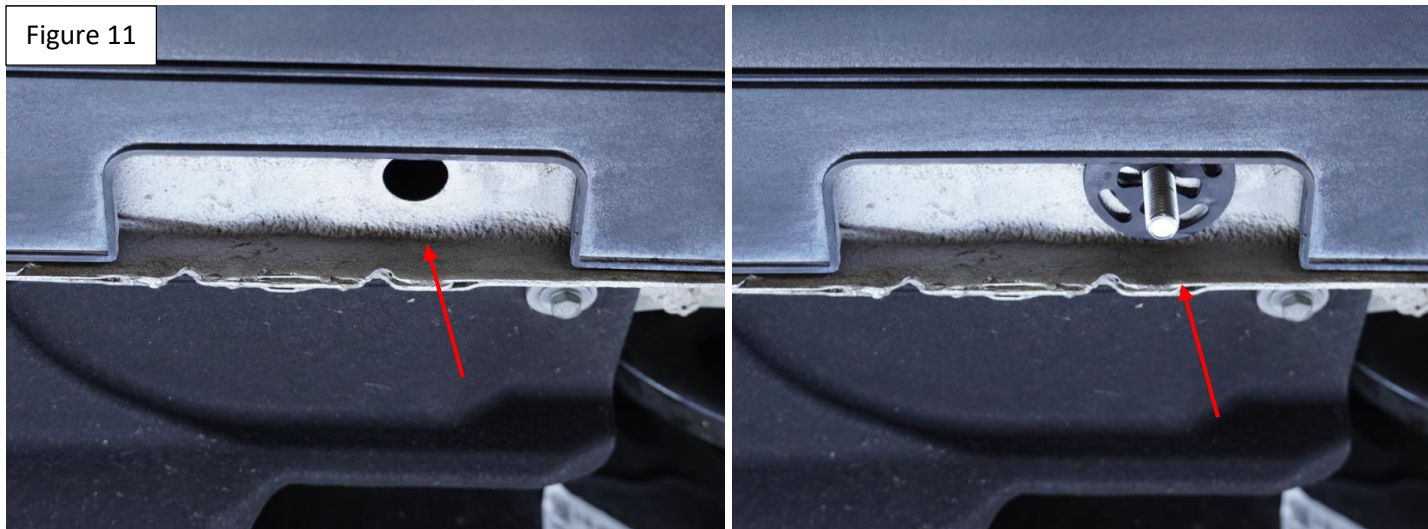Figure 11



Step 10: Install rear bracket #13 as shown Figure 12. Do not tighten.

Figure 12



Installation Instructions 2337 Bracket Kit

Step 11: Attach bracket #14 using supplied M-10 hardware #3 and #4 Figure 13. **Hand tight only.**

Figure 13



Romik's adjustable brackets U.S. patent pending No.19/193,226 provide the precision engineering needed for a truly custom fit, ensuring your accessories sit perfectly to your vehicle for a seamless, factory-installed look. The adjustable option allows you to install close to the body or move the brackets out for extra footing.

Using a level install running boards hand tight onto brackets. Once running boards are leveled tighten bracket to bracket connection and torque to 64 Ft. Lbs.

Step 12: Proceed to last page of this manual for running board install instructions and torque values

For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation.

Thank you for choosing Romik.

NOTICE OF COPYRIGHT INFRINGEMENT

All designs, images, logos, and product data associated with Romik are the **exclusive intellectual property of Romik USA**. Unauthorized use, reproduction, or distribution of this material is strictly prohibited and will be pursued to the fullest extent of the law.

Installation Instructions Running Boards

NOTE: Use of power tools will damage the bottom of the running board and void your warranty.

Step 1: loosen the M8 hardware on back of the running boards.

Step 2: Slide running board onto brackets

Step 3: Tighten hardware to 7 ft lbs.

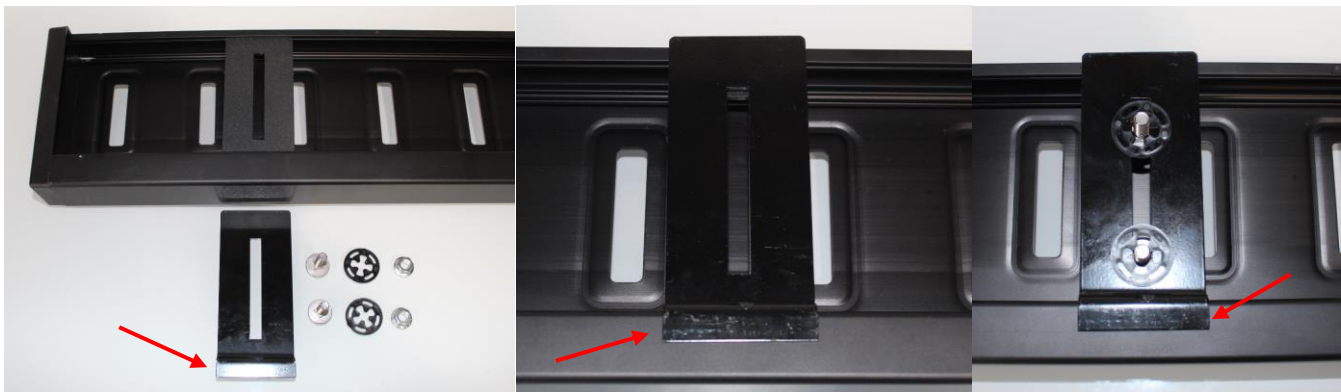


ROF/RPD/ROB Running boards

Step 1: Place clamping plate on top of running board as shown below. Make sure clamping plate sits correctly on running board surface.

Step 2: Install carriage bolts and plastic retaining clips as shown below.

Step 3: Install and tighten hardware to 7 ft lbs.



Product Registration and Warranty Information

- Register your Romik products at <https://romik.com/productregistration>
- Warranty information at <http://www.romik.com/warranty>



Cleaning and maintaining your Romik Running boards

Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.

For video instructions on how to clean your Romik products please click here <https://romik.com/cleaning>